

การตั้งค่า Local Area OptiXstar V163

1. เปิด Browser (Chrome, Firefox, IE) พิมพ์ 192.168.100.1 ในช่อง Address แล้ว∩ด Enter

2. ใส่ Username: root และ Password: ตรวจสอบด้านหลังอุปกรณ์ แล้วกด Log In

	V163	x +		\sim	-	٥	×
÷	→ C @	○ 👌 192.168.100.1	☆		⊠ 0	රු	=
		🗤 v163					
		Welcome to Huawei web page for network configur	ation				
		welcome to ridawer web page for network conligan	ation.				
		User Name :					
		Log In					

รูปที่ 1 หน้า login

- 3. เลือก LAN Configuration -> LAN Host Configuration
- 4. ผู้ใช้สามารถเปลี่ยน Primary IP Address (LAN IP Address) และ Primary Address Subnet Mark ที่ต้องการได้

E	000	Annha	າເພື່ອເປັນ	เทือง้อนอ
э.	ridii	Арріу	INGOL	าแแงกท็น

V163	× +					٥	\times
\leftarrow \rightarrow C \textcircled{a}	🔿 👌 192.168.100.1/inde	x.asp	•	${\times}$	\odot	பி	=
\$1 2 V1	163	Fast Setting roo	t Logout				î
	WAN	LAN Host Configuration					
	LAN ^	On this page, you can configure the LAN management IP address After changing the LAN management IP address, ensure that the primary address pool on the DHCP server is in the same subnet as the new LAN IP address. Other the DMCP many multi-address reports	/ise,				
± 2	LAN Host	Primary Address					
Ì	DHCP Server	Primary IP Address: 192.168.100.1 *					
1 💠 🗸	DHCP Static IP	Primary Address Subnet 255.255.2 *					
	DHCPv6 Server	Secondary Address 3					
	DHCPv6 Static IP	Enable Secondary Address:					
	Security 🗸	IP Address: 192.168.2.1 Subnet Mask: 255.255.25.0					
	Forward Rules	Apply Cancel					

รูปที่ 2 หน้า LAN Host Configuration



6. เลือก LAN Configuration -> DHCP Server Configuration

7. ผู้ใช้สามารถเปลี่ยน Strat IP Address และ End IP Address ที่ต้องการได้

8. คลิก Apply เพื่อบันทึกข้อมูล

۷	V163		× +						\sim		-	٥	×
÷	\rightarrow C \textcircled{a}		0 👌 192.168.1	00.1/index.	asp			☆		0	9	பி	=
👋 V163							Fast Se	ting root	Logout				Â
	WAN				DHCP Server Config	uration							
		合	LAN	^	On this page, you can set DHCP s	erver parameters for the LAI	N-side device to obtain IP addresses.						
		+	LAN Host		Primary Address Pool								
			DHCP Server		Enable Primary DHCP Server:								
		J			Enable DHCP Relay:								
		\$ \$	DHCP Static IP		Enable Option125:								
			DHCPv6 Server		LAN Host IP Address:	192.168.100.1							
					Subnet Mask:	255.255.255.0							
			DHCPv6 Static IP		Start IP Address:	192.168.100.2 address of the LAN h	*(It must be in the same subnet as nost.)	the IP					
			Security	~	End IP Address:	192.168.100.254	*						
			Forward Rules	~	Lease Time:	1 days v							
					Primary DNS Server:								
			Application	~	Secondary DNS Server:								
			WLAN	~	Secondary Address Pool								

รูปที่ 3 LAN Host Configuration