


การตั้งค่าช่องสัญญาณ WiFi


1. เปิดเบราว์เซอร์ไปที่หน้าเราเตอร์ IP 192.168.1.1

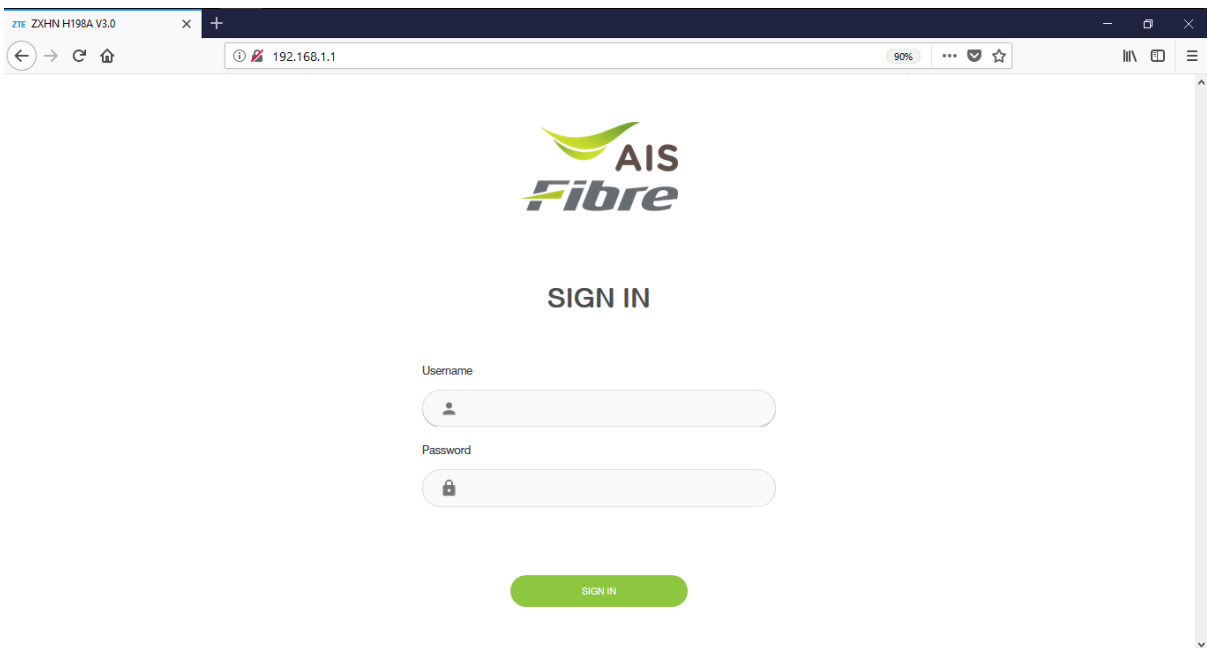


2. กรอก Username และ Password โดยดูจากข้อมูลด้านล่างของเราเตอร์ จากนั้นคลิก Sign In



3. หน้าการตั้งค่า

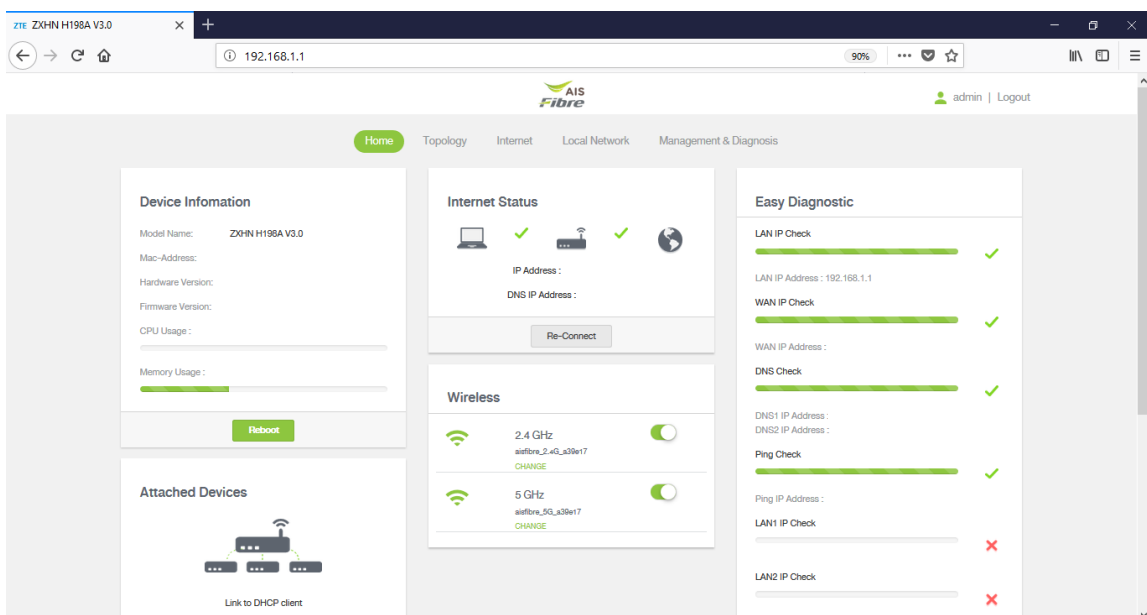


4. คลิกเลือก Local Network -> WLAN -> WLAN Basic -> WLAN Global Configuration

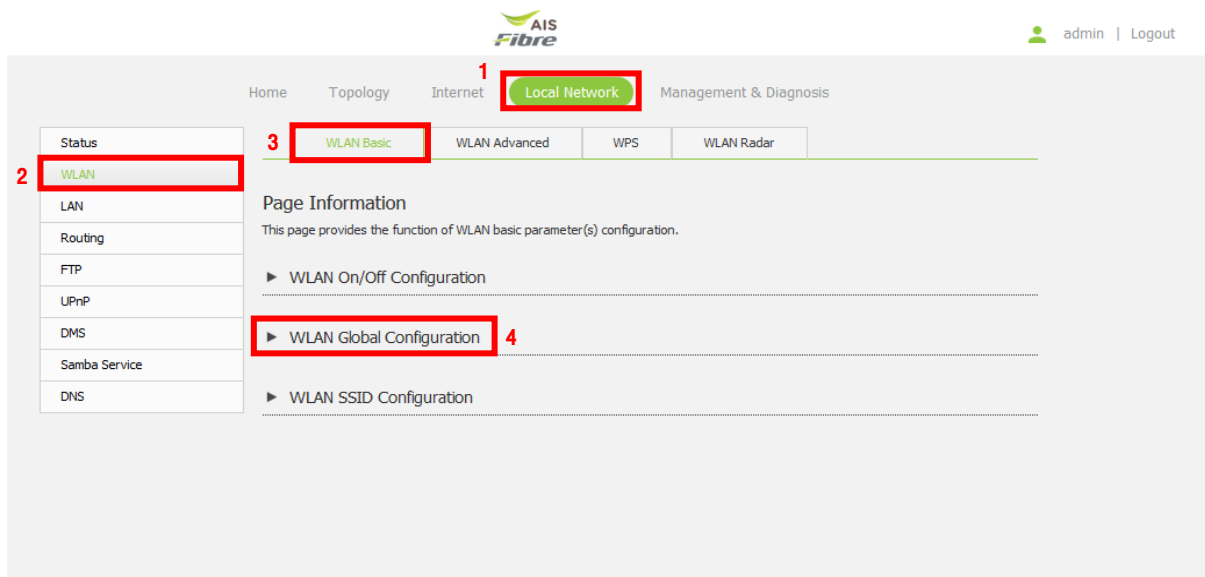

The screenshot shows the AIS Fibre web interface. At the top, there is a navigation menu with 'Local Network' highlighted (1). On the left, a sidebar menu has 'WLAN' highlighted (2). In the main content area, 'WLAN Basic' is selected (3). Under 'Page Information', 'WLAN Global Configuration' is highlighted (4). The interface also shows a user profile 'admin' and a 'Logout' link.

5. เลือกตั้งค่า Channel WiFi เป็นช่องที่ต้องการหรือตั้งค่าเป็น Auto ทั้ง 2.4GHz และ 5GHz

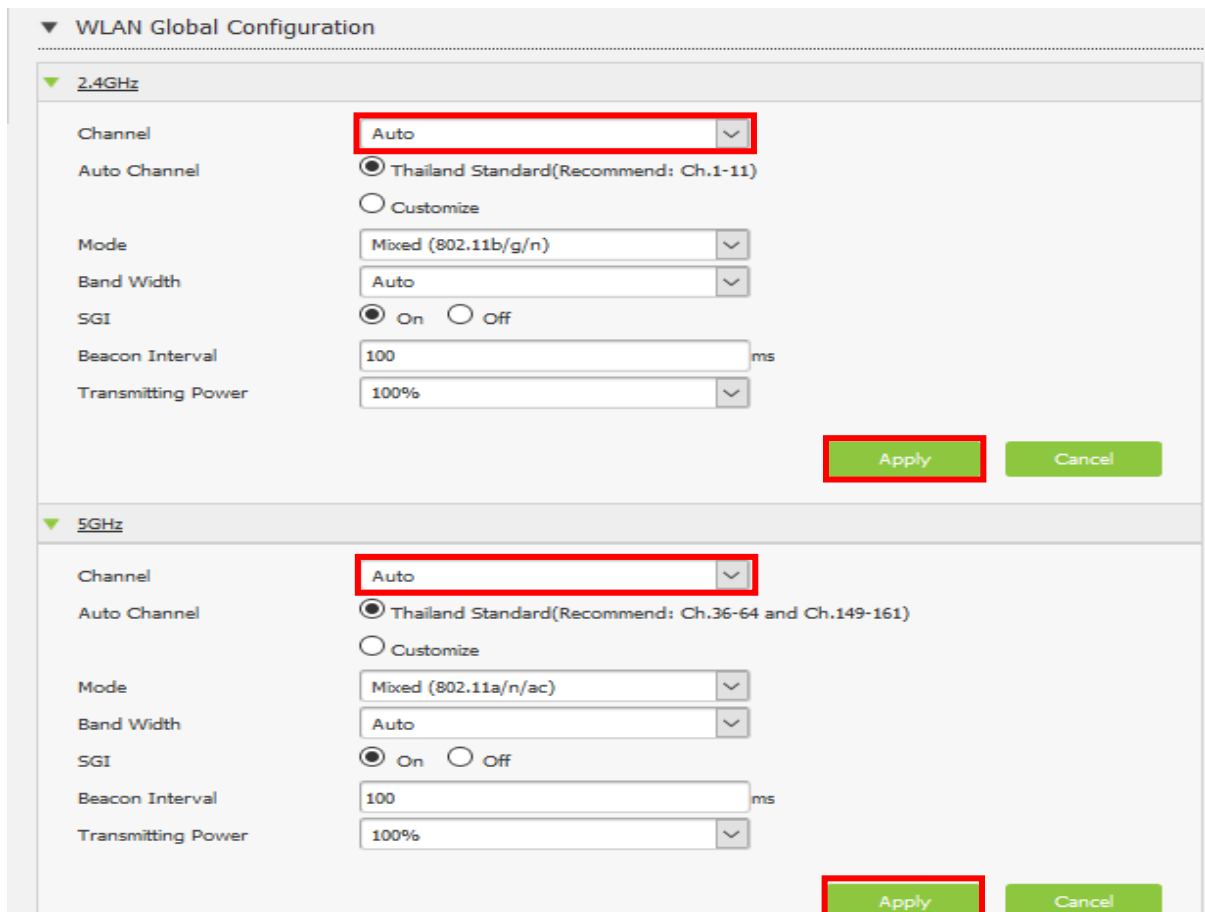

The screenshot displays the 'WLAN Global Configuration' page. It is divided into two sections: '2.4GHz' and '5GHz'. In the '2.4GHz' section, the 'Channel' dropdown is set to 'Auto' (1), and the 'Auto Channel' radio button is selected for 'Thailand Standard (Recommend: Ch.1-11)'. In the '5GHz' section, the 'Channel' dropdown is also set to 'Auto' (2), and the 'Auto Channel' radio button is selected for 'Thailand Standard (Recommend: Ch.36-64 and Ch.149-161)'. Both sections have 'Apply' buttons highlighted in red (3).