



การตั้งค่า Local Area Network Router HG180Ev2

1. เปิด Browser (Chrome, Firefox, IE) พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**
2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

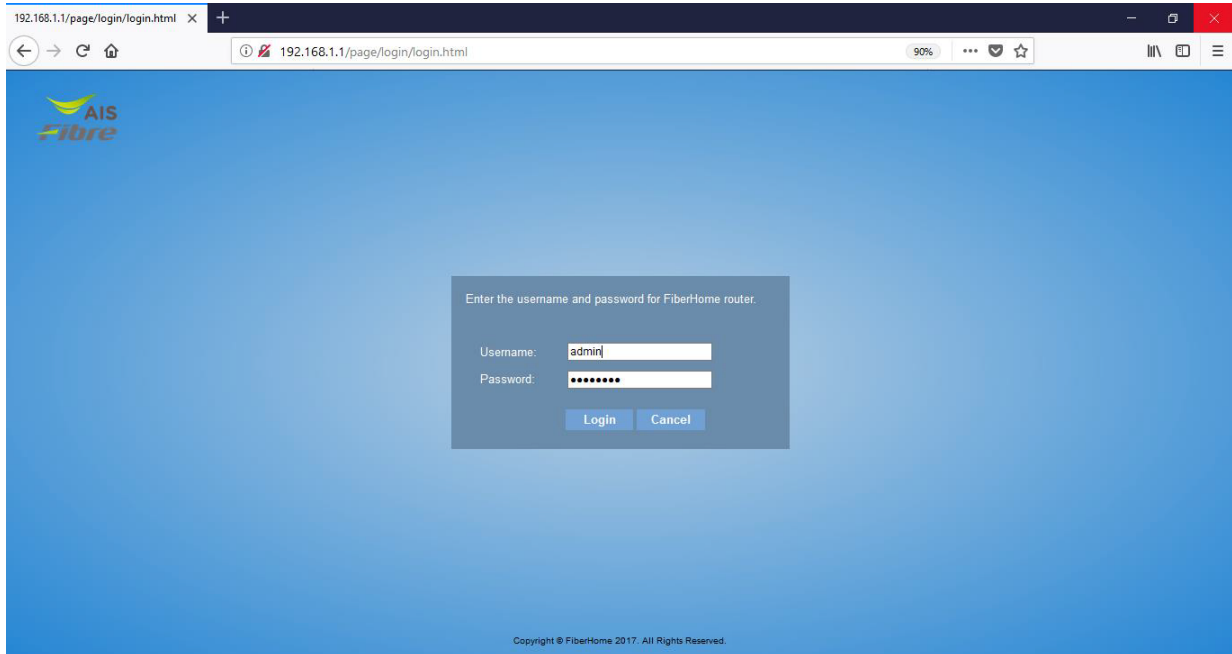


รูปที่ 1 หน้า Login

3. หน้า Home คลิก **Basic Setup**

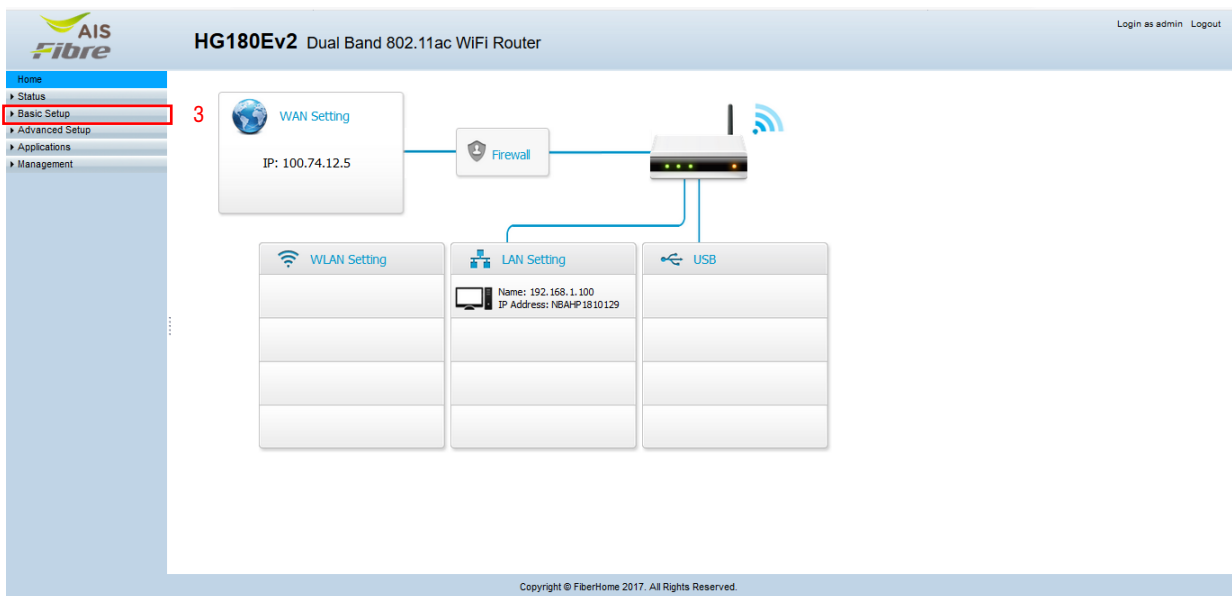

รูปที่ 2 หน้า HOME

4. เลือก LAN -> IPv4 Configuration
5. ผู้ใช้สามารถเปลี่ยน LAN IP Address และ Subnet Mask ที่ต้องการได้
6. ผู้ใช้สามารถเปลี่ยน DHCP Start IP Address และ DHCP End IP Address ที่ต้องการได้
7. คลิก Apply เพื่อบันทึกข้อมูล

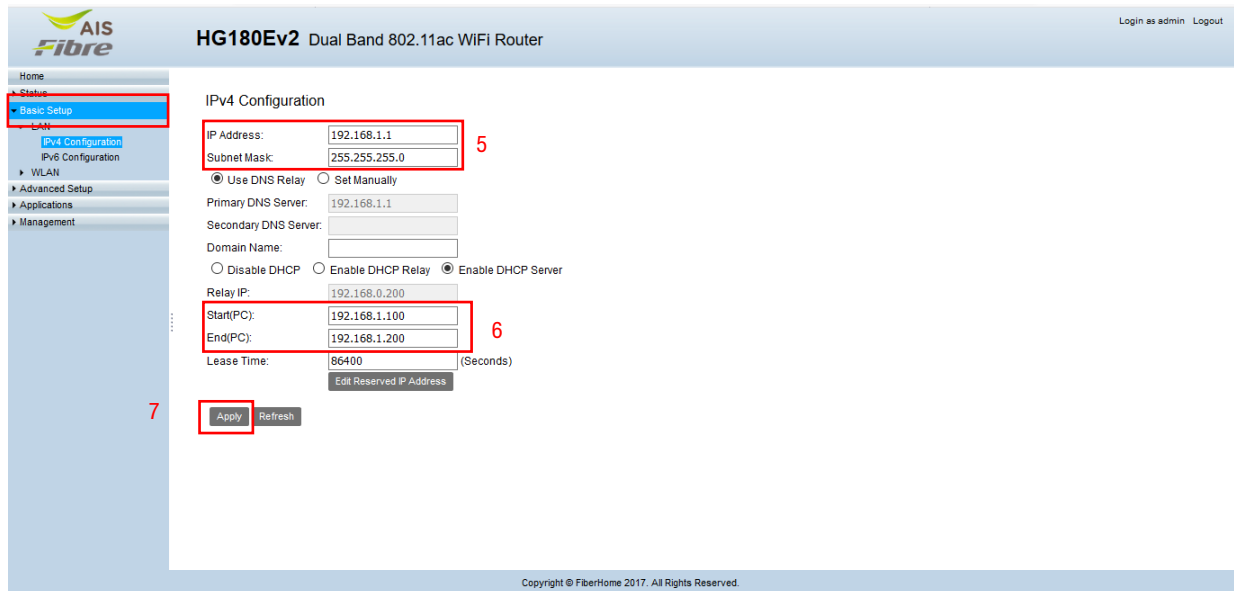

The screenshot shows the web interface for the AIS Fibre HG180Ev2 Dual Band 802.11ac WiFi Router. The page title is "IPv4 Configuration". The left sidebar menu has "Basic Setup" selected. The main configuration area includes the following fields and options:

- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Use DNS Relay (selected) / Set Manually
- Primary DNS Server: 192.168.1.1
- Secondary DNS Server: (empty)
- Domain Name: (empty)
- Disable DHCP (unselected) / Enable DHCP Relay (unselected) / Enable DHCP Server (selected)
- Relay IP: 192.168.0.200
- Start(PC): 192.168.1.100
- End(PC): 192.168.1.200
- Lease Time: 86400 (Seconds)
- Edit Reserved IP Address (button)
- Apply (button) / Refresh (button)

รูปที่ 3 หน้าการตั้งค่า IPv4 Configuration