



การตั้งค่า Local Area Network

1. เปิด Browser (Chrome, Firefox, IE) พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**




รูปที่ 1 หน้ากรอก IP Address เพื่อ Login

2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **SIGN IN**

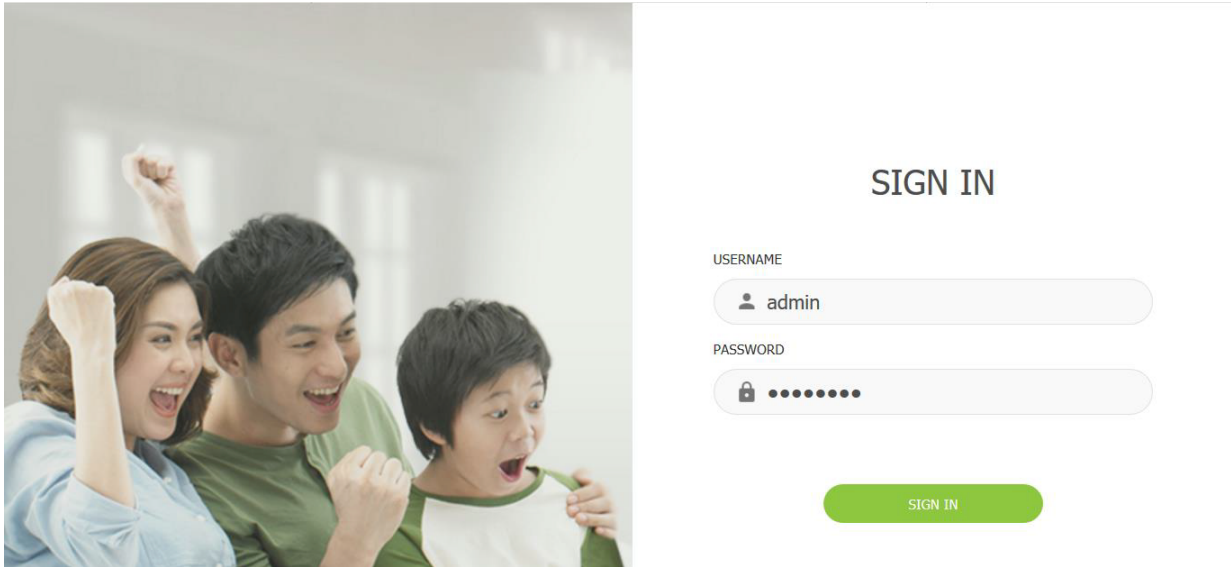


รูปที่ 2 หน้า LOGIN

3. หน้า การตั้งค่า คลิก **Basic Setup**

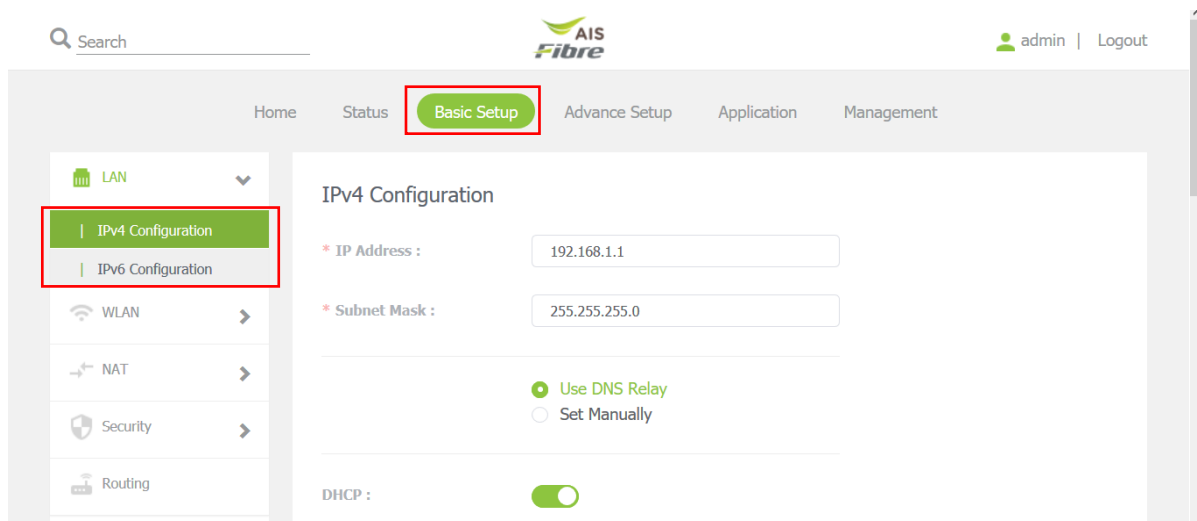

รูปที่ 3 หน้า Basic Setup

4. เลือก LAN >> IPv4 Configuration
5. ผู้ใช้สามารถเปลี่ยน LAN IP Address (LAN IP Address) และ Subnet Mask ที่ต้องการได้
6. คลิก Apply เพื่อบันทึก

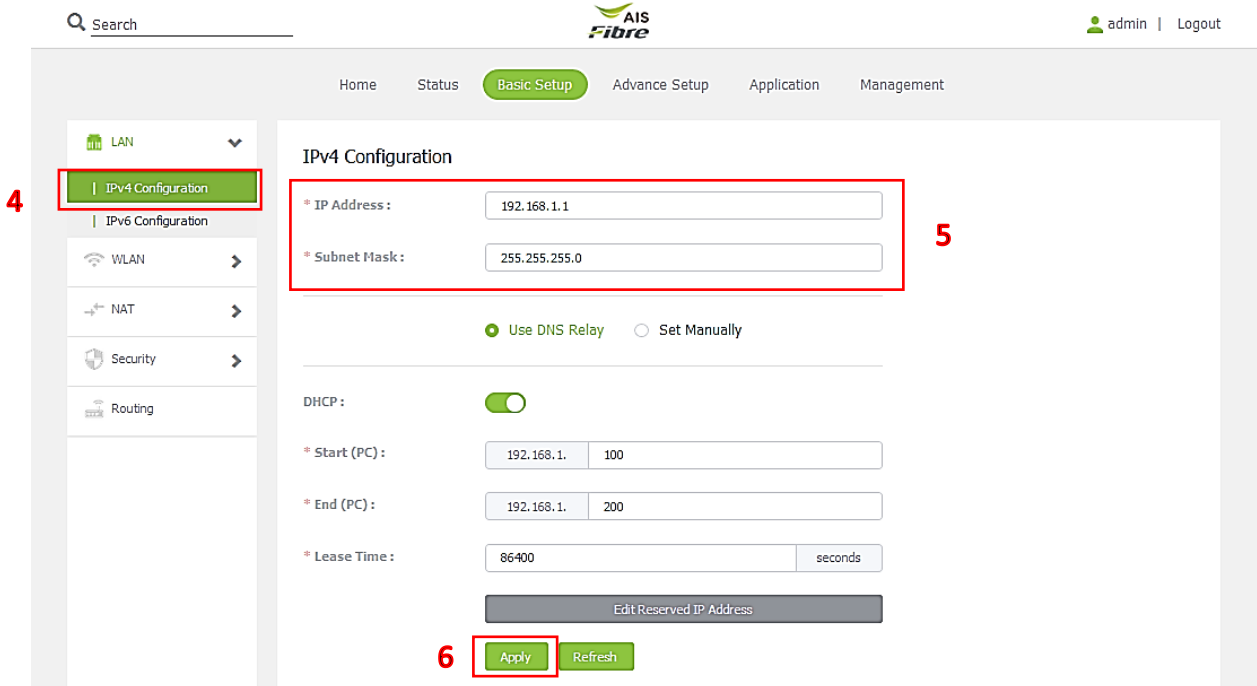

The screenshot displays the IPv4 Configuration page. On the left sidebar, the 'IPv4 Configuration' option is highlighted with a red box and the number 4. The main content area shows the configuration fields for IP Address (192.168.1.1) and Subnet Mask (255.255.255.0), which are also highlighted with a red box and the number 5. Below these fields, there are radio buttons for 'Use DNS Relay' (selected) and 'Set Manually'. The DHCP section is enabled with a toggle switch. Fields for 'Start (PC)' (192.168.1.100), 'End (PC)' (192.168.1.200), and 'Lease Time' (86400 seconds) are visible. At the bottom, the 'Apply' button is highlighted with a red box and the number 6, along with a 'Refresh' button.

รูปที่ 4 หน้า IPv4 Configuration