



การตั้งค่า Local Area Network

1. เปิด Browser (Chrome, Firefox, IE) พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**
2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **SIGN IN**

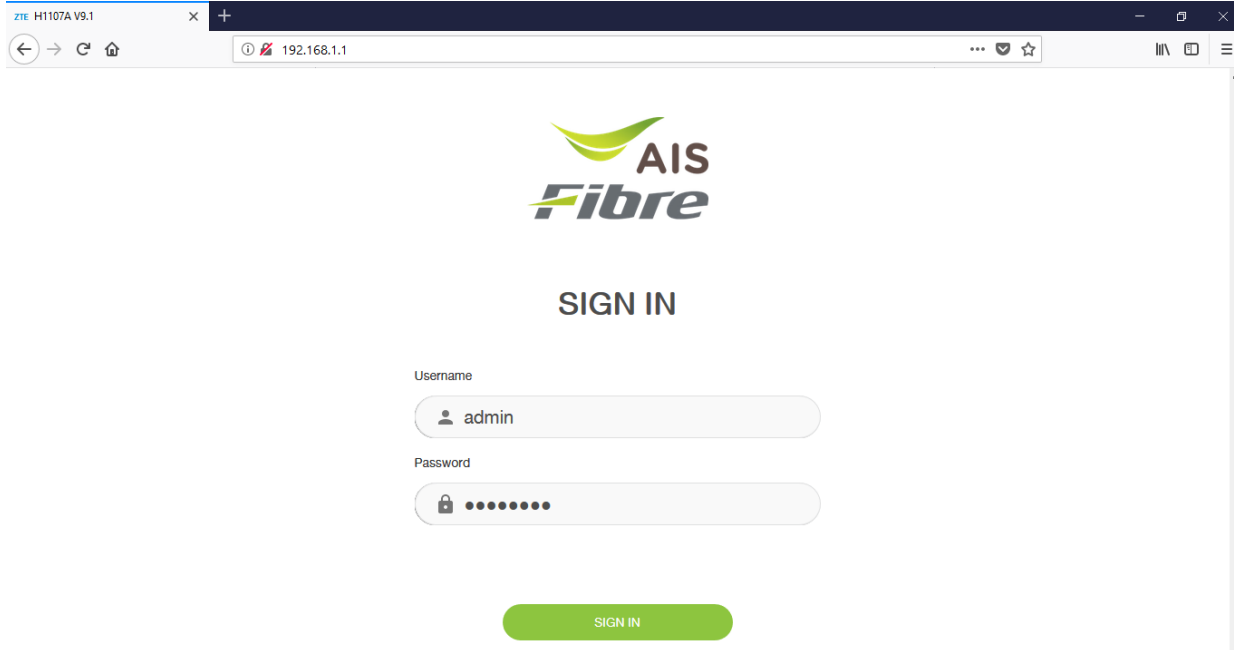


รูปที่ 1 หน้า Login

3. หน้า Home คลิ๊ก **Local Network**

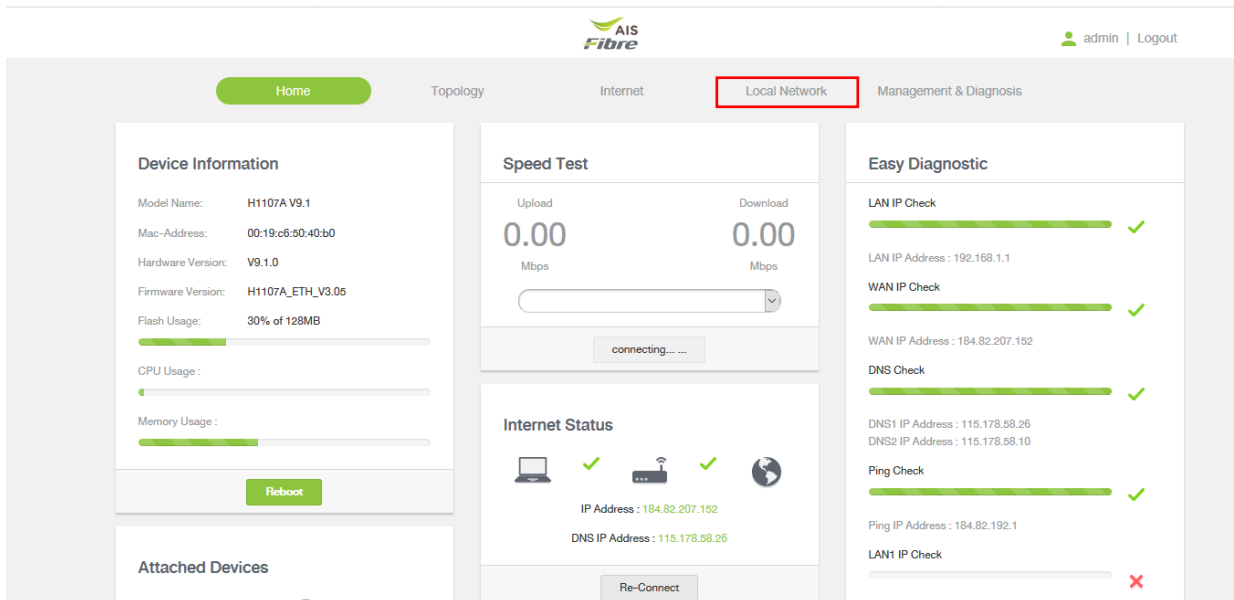

รูปที่ 2 หน้า HOME

4. เลือก LAN -> IPv4 Configuration
5. ผู้ใช้สามารถเปลี่ยน LAN IP Address และ Subnet Mask ที่ต้องการได้
6. ผู้ใช้สามารถเปลี่ยน DHCP Start IP Address และ DHCP End IP Address ที่ต้องการได้
7. คลิก Apply เพื่อบันทึก

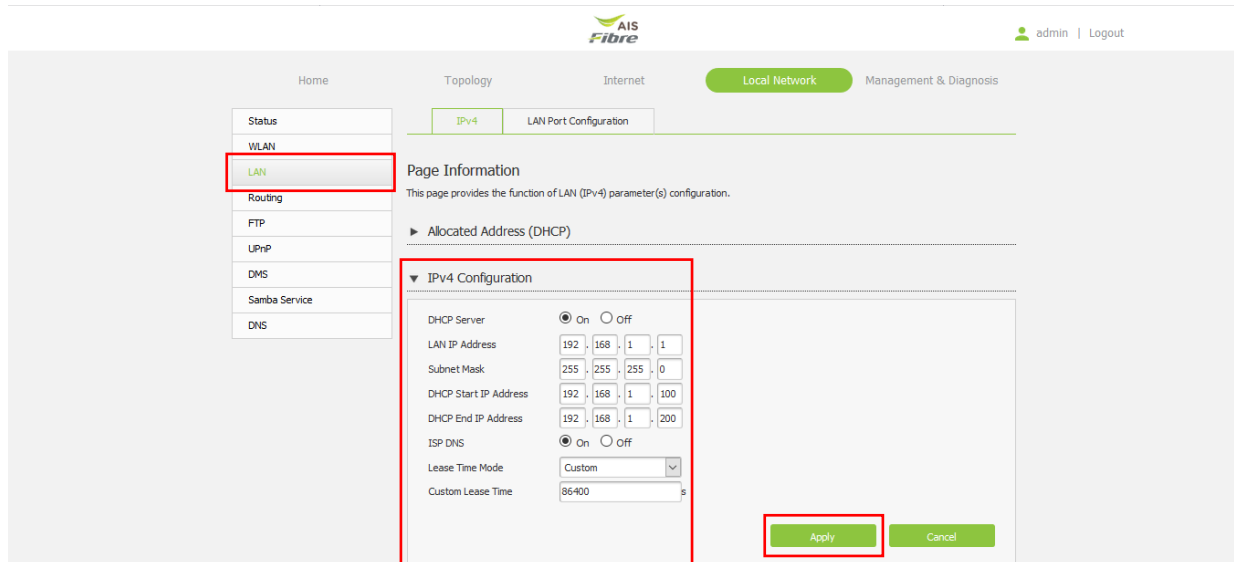

The screenshot shows the 'IPv4 Configuration' page in the ACC management interface. The page is titled 'Page Information' and provides the function of LAN (IPv4) parameter(s) configuration. The 'Allocated Address (DHCP)' section is expanded to show the 'IPv4 Configuration' settings. The settings are as follows:

Parameter	Value
DHCP Server	<input checked="" type="radio"/> On <input type="radio"/> Off
LAN IP Address	192 . 168 . 1 . 1
Subnet Mask	255 . 255 . 255 . 0
DHCP Start IP Address	192 . 168 . 1 . 100
DHCP End IP Address	192 . 168 . 1 . 200
ISP DNS	<input checked="" type="radio"/> On <input type="radio"/> Off
Lease Time Mode	Custom
Custom Lease Time	86400 s

The 'Apply' button is highlighted with a red box, indicating the next step in the configuration process.

รูปที่ 3 หน้าการตั้งค่า IPv4 Configuration